

Airtame - LoopSign Deployment Guide

It's very easy to deploy LoopSign to your Airtame device

 
You can run LoopSign as a background or use it as a fully managed dedicated player.

1. General settings


Initially you must make sure you have configured all the basics on your device and enrolled it in Airtame Cloud according to instructions <https://airtame.com>

2. Set URL as background

- Enter "Settings" on the device.

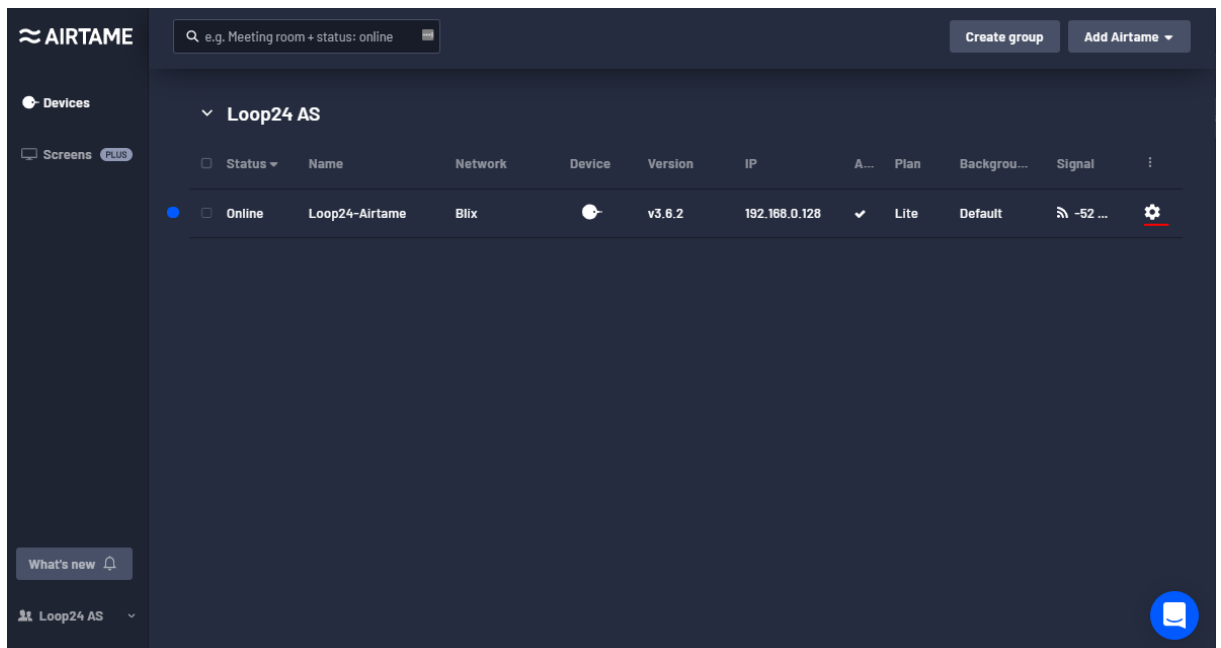

 - Select Website as background and enter the URL to the LoopSign screen you want to show. Also select Airtame overlay. Set to “None” if you want to use the Airtame just as a player.

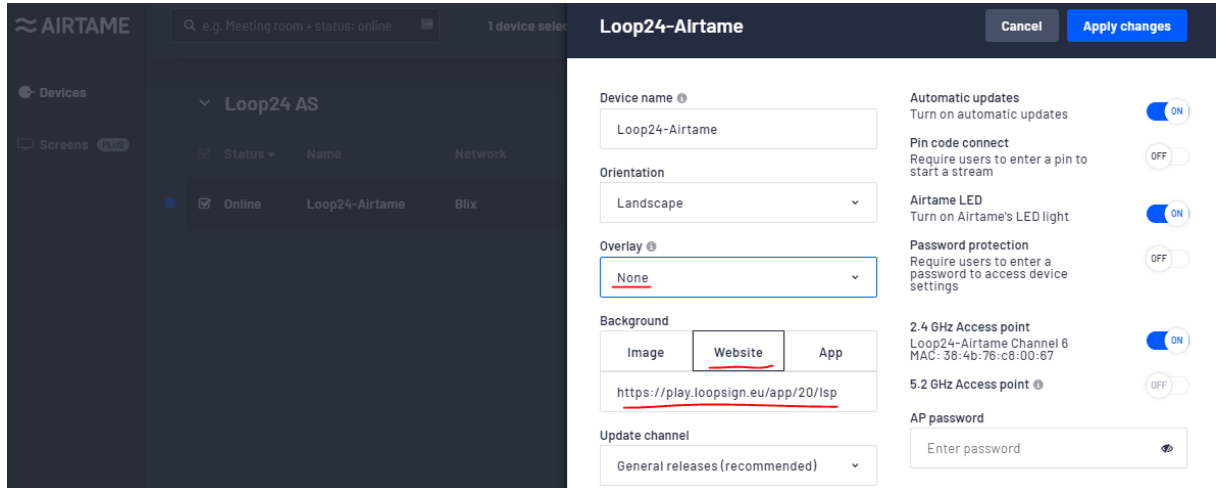

That's it, you are ready to go!